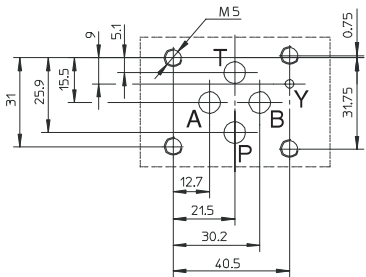
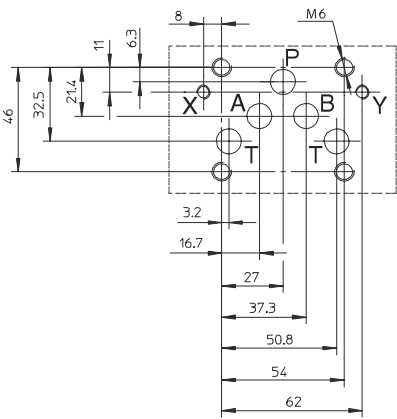
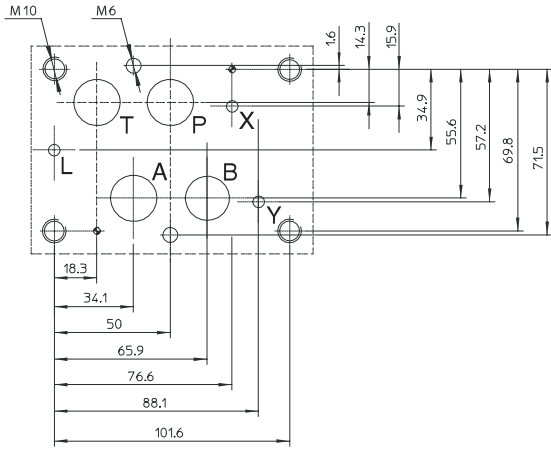


板式阀的安装界面

ISO标准，带有压力开关的方形，压力和流量控制阀

1 ISO 4401:2005 - 适用于方向，压力和流量控制阀

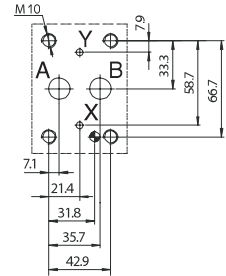
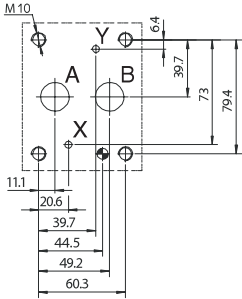
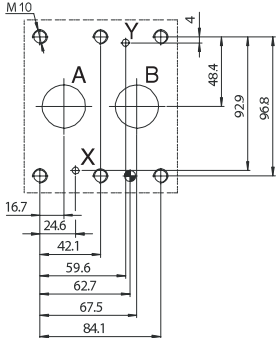
安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
 Y 口仅对 4401-03-03-0-05	4401-03-02-0-05 P, A, B, T = Ø 7,5 max 不带Y口	DH* DLOH / DLOK QV-06 RZMO RZGO DHZO DLHZO QVH* H* (叠加式)
	4401-03-03-0-05 P, A, B, T = Ø 7,5 max Y = Ø 3,3 max	DH*/Y DHZO/Y DLHZO/Y
 X和Y 口仅对 4401-05-05-0-05	4401-05-04-0-05 P, A, B, T = Ø 11,2 max 不带X和Y口	DK* DKZO DLKZO QVK* K* (叠加式)
	4401-05-05-0-05 P, A, B, T = Ø 11,2 max X, Y = Ø 6,3 max	DK*/Y DKZO/Y DLKZO/Y DP-1* DPH-1* DPZO*-1*
	4401-07-07-0-05 P, A, B, T = Ø 17,5 max Y = Ø 6,3 max	DP-2* DPH*-2* DPZO*-2* JP*-2* (叠加式)

安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
	4401-08-08-0-05 P, A, B, T = Ø 25 max X, Y, L = Ø 11,2 max	DP-3* DPH*-3* DPZO*-3* JP*-3* (叠加式)
	4401-10-09-0-05 P, A, B, T = Ø 32 max X, Y, L = Ø 11,2 max	DP-6* DPH*-6*

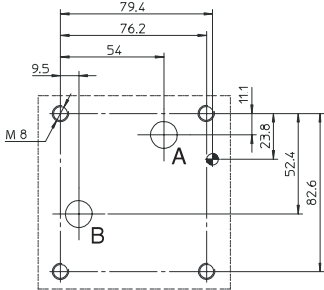
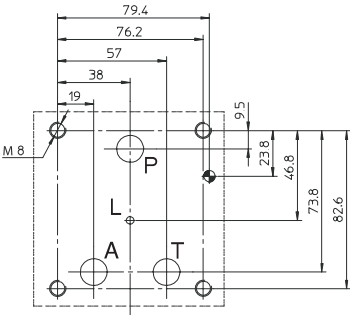
2 ISO 6264:2007 - 适用于压力溢流阀

安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
	6264-06-09-1-97 P, T = Ø 14,7 max X = Ø 4,8 max	AGAM-10 AGMZO*-10
	6264-08-11-1-97 P, T = Ø 23,4 max X = Ø 6,3 max	AGAM-20 AGMZO*-10
	6264-10-17-1-97 P, T = Ø 32 max X = Ø 6,3 max	AGAM-32 AGMZO*-32

3 ISO 5781:2000 - 适用于减压阀和先导式止回阀

安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
	5781-06-07-0-00 A, B = Ø 14,7 max X, Y = Ø 4,8 max	AGIS-10 AGIR-10 AGIU-10 AGRL*-10 AGRCZO*-10
	5781-08-10-0-00 A, B = Ø 23,4 max X, Y = Ø 4,8 max	AGIS-20 AGIR-20 AGIU-10 AGRL*-20 AGRCZO*-20
	5781-10-13-0-00 A, B = Ø 32 max X, Y = Ø 4,8 max	AGIS-32 AGIR-32 AGRL*-32 AGRCZO*-32

4 ISO 6263:2007 - 适用于流量控制阀

安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
	6263-06-05-0-97 A, B = Ø 14,7 max	QV-10/2
	6263-06-07-1-97 P, A, T = Ø 14,7 max L = Ø 11,1 max	QV-10/3

安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
	6263-07-11-1-97 P, A, T = Ø 17,5 max L = Ø 11,1 max V = Ø 7,9 max	QV-20/3 QVMZO-*-20
	6263-08-15-1-97 P, A, T = Ø 23,4 max L = Ø 11,1 max V = Ø 7,9 max	QVMZO-*-32

5 ISO 16873:2002 - 适用于压力开关

安装面尺寸 [mm]	ISO 编码/端口尺寸 [mm]	阀型号
	16873-01-01-0-02 P = Ø 4 max	MAP